

ASSEMBLY INSTRUCTIONS

CONTENT

















MOUNTING THE TABLE STAND





MOUNTING THE TABLE STAND





MOUNTING THE INCLINATION ADAPTER





MOUNTING THE STAND





MOUNTING THE MUSIC HOLDER





Mounting the music holder by tightening the M10 screw with the hex key



















SAFETY NOTES



Danger for children

Ensure that plastic bags, packaging, etc. are properly disposed of and are not in the reach of babies and young children. Choking hazard! Ensure that children do not detach any small parts (e.g. knobs or the like) from the product. They could swallow the pieces and choke! Never let children play unattended with the product.

Danger of tipping when transported under load

If the stand is moved without having removed the installed device. The stand may tip over and cause injuries and property damage Remove the installed device before transporting the stand.

Danger of tipping on unsuitable surfaces

When the stand is installed on soft or uneven ground, The stand may tip over and cause injuries and property damage Install the stand only on even and solid surfaces.